Customer Support



Should you encounter any issues or have any questions regarding your product, feel free to contact our helpful Customer Support Team. Your satisfaction is our goal!

MADRIGAL ENTERPRISE LTD

27Old Gloucester Street, London, United Kingdom, WC1N 3AX

Email: support@suboos.net

We will reply you within 12 hours

ULTIMATE LED Lantern

Model: 8806



Thank You

Thank you for purchasing the Ultimate Rechargeable LED Lantem by SUBOOS. This lantern features 4 different lighting modes with flexible dual power sources (rechargeable 18650 batteries and AAs). Plus, it is also a power bank of 5200mAh for your USB devices like mobile phone, camera, GPS. Brighten any outdoor adventure to your needs with the collapsible and portable design. It has military grade protection, making it safe for a high range of applications, from camping to power outage.

We're constantly working at building better living with the products and services we create. Should you ever experience any issues with your new product, feel free to contact our helpful customer service team by email at support@suboos.net.


Safety Information

IMPORTANT:

Please read, understand, and comply with all of the instructions provided in this manual before using the device. Failure to comply with the instructions given in this manual and/or using the device in ways other than the ones mentioned in this manual may result in serious injury and/damage to the product.

- When not in use for a extended period of time, remove the batteries to avoid power drainage.
- When not in use, turn off the lantern by completely collapsing the device.
- When installing or changing out batteries, always make sure to place them in the correct polarity as indicated within the battery compartment.
- When charging the lantern, do not push hard on the input micro-USB with the cable.
- When charging the lantem, make sure the AA batteries on top battery compartment removed or the lantem is closed.
- DO NOT dispose any part of this product in a fire.
- DO NOT submerge or place the lantern in any direct contact to water or any other liquid.
- When cleaning, use a damp or dry cloth to wipe the lantem's surface.
- Dispose all part of this product in accordance with local environmental regulations. Do not dispose of the lantern or batteries in regular household waste.

Product Components

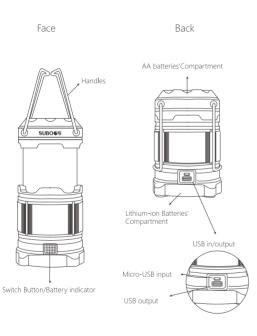


Parameters

Product Parameters	
Light Source	15x5730 SMD LED
Light Modes	High 180 lumens/ Medium 60 lumens / Red/ Red Flash
Typical Working Time	High11.5 hours/Medium 15 hours/Red>100 hours
Typical Charging Time	8 hours
Weight	1.2 pounds/550 g
Power	2xLi-ion18650 batteries at bottom, and/or 3x AA batteries
Water-resistance Level	IPX5 (Withstand heavy rain but do not immerse into water)

Packing List	
1x SUBOOS Ultimate Rechargeable LED Lantern	
2 x SUBOOS 18650 Lithium ion Batteries (installed in bottom battery compartment)	
3 x AA batteries (Panasonic or GP) (installed in top battery compartment)	
1 x Universal USB cable	
1 x SUBOOS hanging clip	
1 x User Manual	

Set Up & Installation

 Before first use, unscrew both the top and bottom battery compartments by rotating the lids of the compartments counterclockwise. Remove the insulation strips and reapply the battery compartment lids.

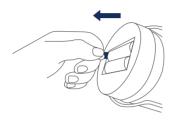

- Flip out the foldaway handles and pull them up to turn on the lantern.
- Adjust the height to control the brightness of the emitted light.



- Switch the lighting modes by pressing on the white button of the lantern for: High Medium Red Red Flash.
- Fully collapse the lantern to turn off the light. Fold down the handles and secure them to bottom of the base to ensure the lantern is off

 


SUGGESTION FOR ENERGY EFFICIENCY:


- Remove all the batteries from the battery compartments when storing the lantern for an extended period of time without usage.
- Only use lithium rechargeable batteries regularly. Keep the AA batteries insulated or in your home/backpack, they can be substitute for power outage or outdoor activities like camping, hiking, etc.
- You can use only one rechargeable battery to power the lantern.

Recharge & Power Bank

- Recharge Charge itself by connecting the lantern with the included USB cable to laptop, car charger, or any adapters with USB output - Insert the Micro-USB(smaller) side to the lantern's USB input, and the USB (bigger) side to the power source with USB output.
 - * Typical Charging Time: 8 hours.



- Power Bank You can use the lantern to charge mobile phone or other handhold devices by using the included universal Android USB cable or the other USB cable specially for your device, such as the lightning cable for iPhone.
 - * Reference of Capacity: Charge iPhone to full 2.5 times.

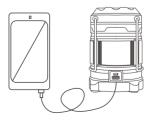

Note:

- When charging the lantern, make sure the AA batteries on top battery compartment removed or the lantern is closed;
- DO NOT push too hard when insert the micro-USB into the USB input of the lantern;
- The switch button is also a battery indicator:

Button Color	Indicate
Blue	Working Normally & Battery is Charged
Red	Low Battery & Under Charging

Warranty Terms & Policy

SUBOOS warrants the Ultimate Rechargeable LED Lantern to be of the highest quality in material, workmanship and service for 5 Years (not including batteries), effective from the date of purchase. SUBOOS will replace any product found to be defective due to manufacturer flaws based on eligibility; refunds are available within the first 30 days of purchase. This warranty extends only to personal use and does not extend to any product that has been used for commercial, rental, or any other use in which the product is not intended for. There are no warranties other than the warranties expressly set forth with each product.

This warranty is non-transferrable. SUBOOS is not responsible for any damages, losses or inconveniences caused by equipment failure or by user negligence, abuse, or use noncompliant with the user manual or any additional safety, use, or warnings included in the product packaging and manual.

This warranty does not apply to the following:

- Damage due to abuse, accident, alteration, misuse, tampering or vandalism.
- · Improper or inadequate maintenance.
- · Damage in return transit.
- Unsupervised use by children under 18 years of age.

SUBOOS and its subsidiaries assume no liability for damage caused by the use of the product other than for its intended use or as instructed in the user manual. Some states do not allow this exclusion or limitation of incidental or consequential losses so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

Note:

To claim your warranty, please visit <u>www.suboos.net/warranty</u> or contact customer support.